


newfron

USER  
MANUAL

NF-VS103B



Please do not use your device without  
carefully reading the user manual.


Dear Customer,

First of all, we would like to thank you for choosing our NEWFRON branded device, which is the pioneer of quality.  
In order for your device, which is manufactured in modern facilities and has undergone meticulous quality control,  
to provide you with the best efficiency,

we kindly ask you to read this entire manual carefully before using your device and keep it as a reference source.

www.reiselektronik.com.tr


Product Structure:

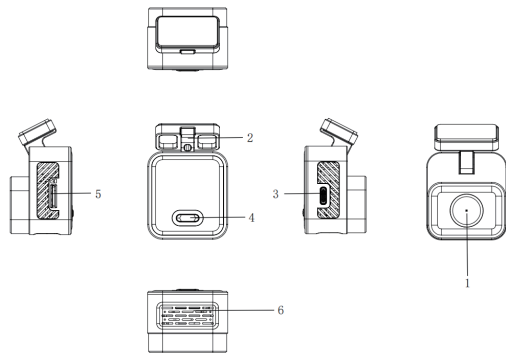

1.Lens  
2.3M sticker Holder  
3.Type-C power charging port  
4.Power  
- Long press 3 seconds to power ON/OFF the camera.  
When the camera is on, the blue indication light here will blink.  
5.SD card port  
6.Speaker

1

Set up and Installation

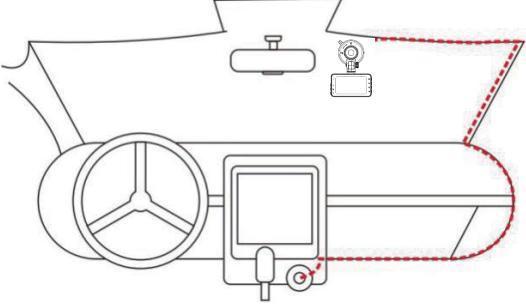

Quick Guide:

1. Insert a Micro SD card into the dashcam to store videos.  
Use a high-speed Micro SD card  
2. Connect the VS103B dash cam to the 3M sticker holder and attach it to the inside of the front windshield  
3. Plug the included Type-C power adapter into the car cigarette lighter socket, connect the Type-C side of the power adapter to the device charging port, and then connect the camera to the device. Route the excess cable along the interior for a better look.  
4. Start the car and the camera will automatically turn on.  
Before going on the road, make sure the camera lens is clean

2

and without lens film, and nothing is blocking the lens

Common faults

DVR doesn't turn on: Check that the vehicle is in the ignition on state and power is in connection  
DVR cannot record: Ensure whether the SD card is full or damaged. Format the SD card or replace the new SD card for troubleshooting  
Unclear picture quality: check the DVR lens and windshield

SD card

The system supports up to 256 G Micro SD memory card. In order to maintain smooth video recording, it is recommended to use a high-speed card of Class 10 or above. At the same time, do not plug or unplug the SD card when the system is turned on to avoid damage to the SD card.


SD card is a consumable, please maintain it regularly, for example, format the SD card every 1-2 months.

3


How to connect Wi-Fi:

Step 1: App download address: Download "VIIDURE" in store and install; Or can Scan QR Code to download application;

Apple IOS



Android:



Step 2: Enter the menu page and turn on the WiFi function;  
Wi-Fi ON;  
Then WiFi information will appear on the screen

Step 3: Open the mobile phone setting page, select WLAN selection.  
And connect WiFi: NEWFRON\*\*\*\*  
Password: 12345678

Step 4: Open the "VIIDURE" APP to stream/preview videos.

4

Specification:

CPU	GK7201V300
Resolution	1080P FHD@30FPS
Screen	No screen
Video Format	TS
Photo Format	JPG
Wi-Fi	Support
Loop recording	Support
G-sensor	Support
GPS	No
Power Supply	Li-Button battery 5V 1A
Accessories	ACC cable (hard wire kit ) 3M sticker ,user manual
Current Frequency	50HZ/60HZ
Max. SD Card Support	Slot for Micro SD card up to 128GB
Operation temperature	(-20℃-70℃)
Operation temperature	-20℃-70℃

Note:

Product Specifications could be subject to modification due to upgrading or revising. Please regard the actual product as the standard form.

5

newfron

USER  
MANUAL



IMPORTER COMPANY  
Reis Elektronik Sanayi vi Ticaret A.Ş  
Mahmutbey Mah. Küçük Halkalı Cad. No:9 Bağcılar-İstanbul  
Tel: +90 212 447 02 02

www.reiselektronik.com.tr