

# NF-X28



 
**Lütfen kullanma kılavuzunu dikkatlice  
okumadan cihazınızı kullanmayınız.**

**Değerli Müşterimiz,**

**Öncelikle kalitenin öncüsü olan NEWFRON markalı cihazımızı tercih ettiğiniz için teşekkür ederiz.**

**Modern tesislerde üretilen ve titiz kalite kontrolünden geçirilmiş olan cihazınızın size en iyi verimi sunabilmesi için,  
bu kılavuzun tamamını cihazınızı kullanmadan önce dikkatle okumanızı ve bir başvuru kaynağı olarak saklamanızı rica ederiz.**

## Product Structure:

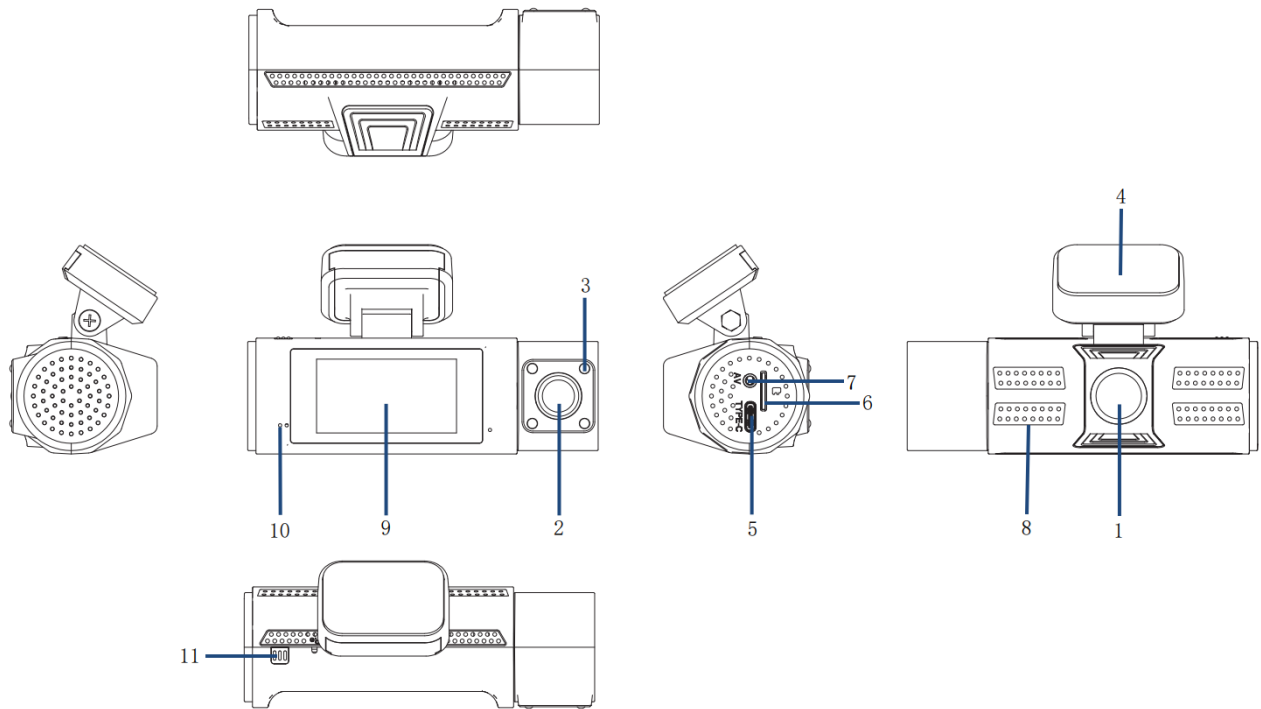

1. Front Lens      2. Cabin Lens 3. Infrared light

4. 3M Bracket    5. Type-C power charging port



6. SD card port    7. AV IN          8. Speaker

9. Screen      10. Indicator light

11. Power Key: Short press to start/stop recording

-Long press to turn On/Off the device

## Set up and Installation

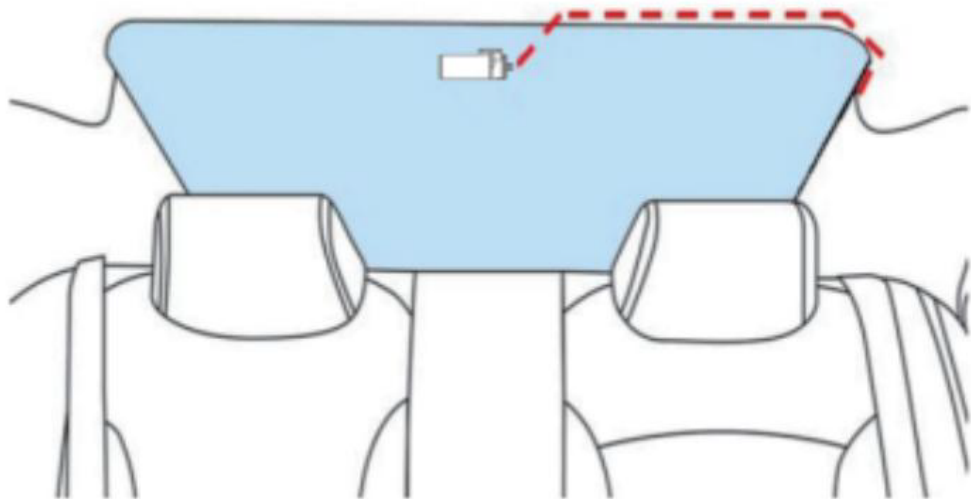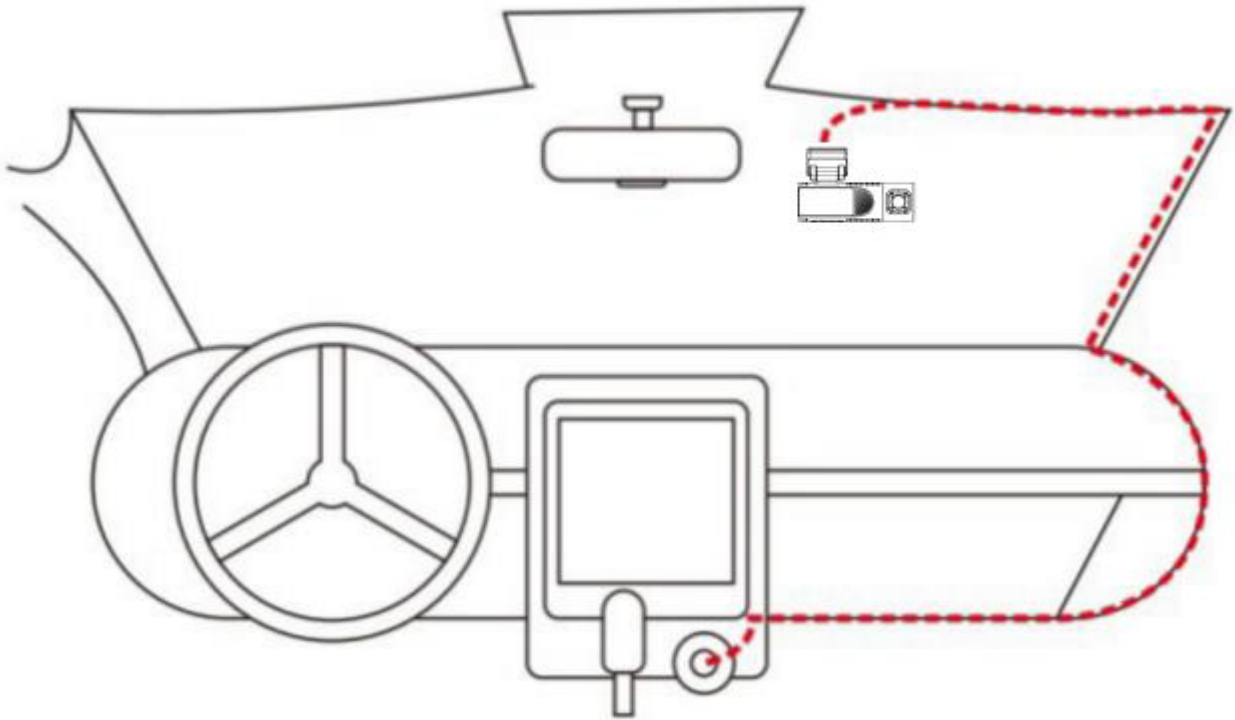  

The Installation of the Rear Camera

## **Quick Guide:**

- 1.Firstly Stick the included static sticker on the windshield, recommended position is near the rear view mirror, adjust angle for best coverage.**
- 2.Insert a Micro SD card into the dash cam to store video, use a high-speed Micro SD card**
- 3.Plug the included Type-C power adapter into the car cigarette lighter socket, connect Type-C side of power adapter to the device charging port.**
- 4.Start your car, the camera will automatically power on, be sure the camera lens is clean and without the lens film, also there is nothing blocking the lens before going on the road**

**NOTICE: If a memory card is inserted while the camera is on, the camera will power off automatically. If this happens, long press the OK button to power the camera back on.**



## **Common faults**

DVR doesn't turn on: Ensure that the vehicle is in the ignition on state and power is in connection

DVR cannot record: Check whether the SD card is full or damaged. Format the SD card or replace the new SD card for troubleshooting

Unclear picture quality: check the DVR lens and windshield

## **SD card**

The system supports up to 256G Micro SD memory card. In order to maintain smooth video recording, it is recommended to use a high-speed card of Class 10 or above. At the same time, do not plug or unplug the SD card when the system is turned on to avoid damage to the SD card.

SD card is a consumable, please maintain it regularly, for example, format the SD card every 1-2 months.

## How to connect Wi-Fi:

Step 1: App download address: Download “VIIDURE” in store and install; Or can Scan QR Code to download application;

Apple IOS



Android:



Step 2: Enter the menu page and turn on the WiFi function; Wi-Fi ON;

Then WiFi information will appear on the screen

Step 3: Open the mobile phone setting page, select WLAN selection.

And connect WiFi :

Password: 12345678

Step 4: Open the “VIIDURE” APP to stream/preview videos.

## Specification:

Resolution	2K+ 1080P
Screen	1.97 inch screen
Video Format	TS
Photo Format	JPEG
Cabin Camera	Support 1080P
Rear Camera	Support Optional
Loop recording	Support
G-sensor	Support
Parking Mode	Support
Video Watermark	Support
Power Supply	Acc cable (hard wire kit)
Accessories	ACC cable *1, 3M holder sticker*1, anti static tape*2

## Note:

Product Specifications could be subject to modification due to upgrading or revising. Please regard the actual product as the standard form.